


**CARD-MMC715B**

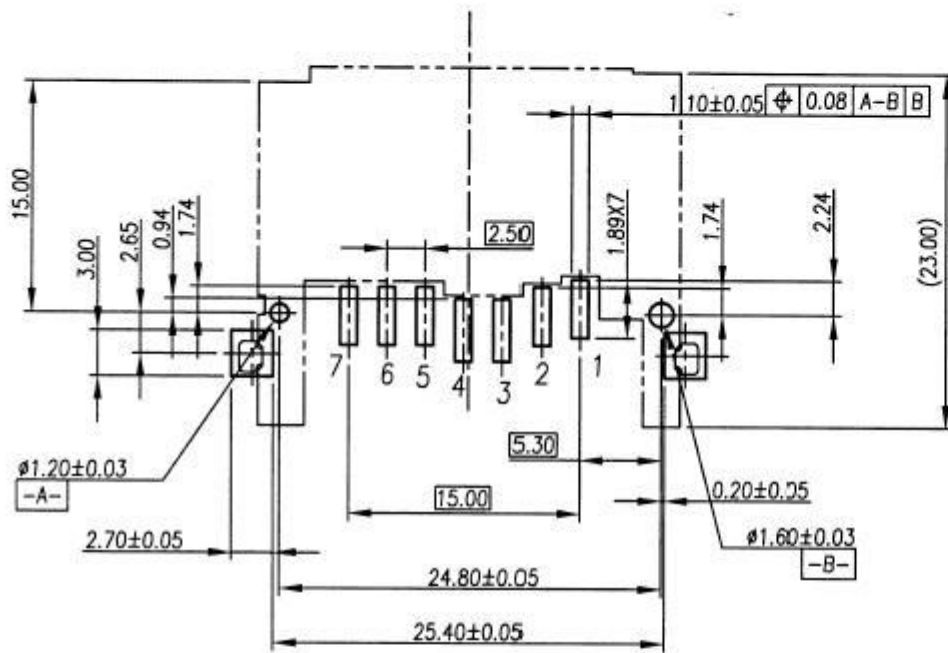

PC BOARD LAYOUT COMPONENT SIDE

SD CARD PIN ASSIGN	
PIN	NAME
1	CD/DAT3
2	CMD/DI
3	VSS1
4	VCD
5	CLK/SCLK
6	VSS2
7	DAT0